



Always dispose of unwanted tools, accessories and packaging materials in an environmentally friendly manner.



In observance of European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE) and its implementation in accordance with national law, electrical goods that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.

Do not dispose of electrical goods with domestic waste materials as inappropriate disposal may cause potential hazards to the environment and human health.

For further information, please contact your local authority or the retailer from whom you purchased the product.



This product does not contain any restricted substances in concentrations and applications which are banned by the European RoHS2 Directive.

DECLARATION OF CONFORMITY

We hereby certify that **KOBE EXTENDED STRAIGHT DIE GRINDER**

(ORDER CODE: KBE-270-4140K)

complies with all the relevant provisions of the

Machinery EN 792, 2006/42E.

Standards Applied:

EN 792-9, EN 28927-1 & PrEN 12366.

Signed:

Date: 17th January 2022

Name: Toni Johanson

Position: Compliance Director

KOBE TOOLS

Cromwell Group (Holdings) Limited.
 65 Chartwell Drive, Wigston, Leicestershire,
 England, LE18 2FS

Contact Us: contactus@cromwell.co.uk

Country of Origin :Taiwan



QUALITY GUARANTEE & WARRANTY

KOBE INDUSTRIAL AIR TOOLS carry a one year manufacturer's warranty.

KOBE INDUSTRIAL AIR TOOLS are designed & manufactured
 to the highest standards & specifications

Assuring the quality and performance required by all sectors of industry.

KOBE INDUSTRIAL AIR TOOLS are fully guaranteed against
 faulty materials & workmanship.

Should they be found to be defective, they will either be repaired or replaced
 free of charge (fair wear and tear and/or misuse excepted).

Please retain supplier invoice as proof of purchase.

Cromwell Group (Holdings) Limited.
 65 Chartwell Drive, Wigston, Leicestershire, England, LE18 2FS
 © The Kennedy Group Ltd. 01/22

KOBETM

INDUSTRIAL AIR TOOLS

EXTENDED STRAIGHT DIE GRINDER

MODEL:
B3555

ORDER CODE:
KBE-270-4140K



- Use for grinding, polishing, buffing and deburring
- The extra length allows you to reach more confined areas
- Reversible hardened steel 6mm (1/4") collet
- Planetary gears for longer life and smoother running
- Low profile teasing throttle for precise speed control
- Rotating air inlet to prevent the air hose tangling



WARNING: THE SAFETY INFORMATION GIVEN INSIDE MUST BE
 READ AND UNDERSTOOD BY ANY PERSON USING, INSTALLING,
 REPAIRING OR MAINTAINING THESE PRODUCTS.

OPERATOR'S MANUAL

Please retain this information for future reference.

You have purchased a quality product that is designed for high performance and long service life. If correct use, safety and maintenance procedures are observed this machine will last for many years.

KOBE INDUSTRIAL AIR TOOLS have been specifically designed to help you work **SAFELY** and **EFFICIENTLY**. Your care and good judgement are the best protection against injury, but always ensure that the appropriate safety equipment is worn. All possible hazards cannot be covered here, but the most important ones have been highlighted.

- Always adhere to the processes and safety warnings, which are stated in the instruction manual.

GENERAL OPERATING HAZARDS

- Always ensure all users are physically able and competent to handle the size, weight and power of the tools and have received appropriate training to perform the task.
- Always avoid accidental starting of the tool by disconnecting it before replacing accessories or repairing.
- Always be aware of the tool rundown time.
- Never allow routine to lead to mistakes.
- Never operate if any parts are missing or damaged.
- Never allow untrained persons to operate the tool.

WORKPLACE HAZARDS

- Always ensure your working area is clean and well lit.
- When working at height make sure that the tool is safely secured and be aware of objects falling below. Make sure that no persons are working directly below the working area.
- Do not operate in explosive atmosphere, for instance extreme dust, gases and liquids.
- Keep children and bystanders away while operating the tool. Distractions can cause you to lose control.
- Never run the tool in areas exposed to water or in damp conditions.

PERSONAL PROTECTION

- Always wear approved eye protection during operation. Use safety glasses or goggles which conform to BSEN136 or CE equivalent that provide protection from the front and side. The operator of the power tool is responsible for following accepted eye, face, respiratory, hearing and body protection.
- Always ensure that all long hair and loose clothing, ties, scarves, jewellery, etc., are secured or removed.

pain or whitening of the skin occurs. Repetitive work motions, awkward positions and exposure to vibration can cause "Repetitive Strain Injuries".

- When operating the tool stay alert and use common sense, especially when it comes to working at height. Be aware of what's below you.
- Do not overreach. Keep a proper balance and footing at all times.
- Do not use the tool if under the influence of alcohol, drugs or medication.


SPECIFIC SAFETY INSTRUCTIONS

- Always ensure all accessories are rated to the "Free" speed of the air tool and intact before fitting or using.
- Always use air tool attachments that are in good condition and are designed to be used with the tool.
- Always be aware of the risk of crushing between the tool and the workpiece due to sudden movement or reaction forces.
- Always shut off air supply, drain hose of air pressure and disconnect tools from air supply when not in use, before changing accessories or when making repairs.
- Never apply additional or over excessive force to the air tool.

- Always consult a doctor if numbness, tingling,

INDEX NO.	ORDER CODE	DESCRIPTION
22	KBE-298-9353S	Spindle
23	KBE-298-5825E	Ext. Housing
24	KBE-298-9324S	Collet
25	KBE-298-9325S	Collet Nut
26	KBE-298-5825M	Front Cap
27	KBE-298-9327S	Spanner (2of)
28	KBE-298-9355S	Washer
29	KBE-298-9340S	Throttle Valve
30	KBE-298-9356S	Tension Shaft
31	KBE-298-5856D	Spring Pin (1.5x12L)
32	KBE-298-5823H	Fixed Shaft
33	KBE-298-5545Y	Washer
34	KBE-298-5508J	O-Ring (22.8x2)
35	KBE-298-5509K	Deflector
36	KBE-298-9339S	Safety Bar
37	KBE-298-9344S	Spring
38	KBE-298-9338S	Steel Ball
39	KBE-298-9343S	Spring Pin (2x15L)
40	KBE-298-5823M	Damping Material
41	KBE-298-5822S	Grip

INDEX NO.	ORDER CODE	DESCRIPTION
01	KBE-298-5822C	Motor Housing
02	KBE-298-9302S	Lever Pin (3x18L)
03	KBE-298-5602C	Air Inlet
04	KBE-298-9304S	Throttle Lever
05	KBE-298-9305S	Valve Shaft
06	KBE-298-5822G	Valve
07	KBE-298-5822M	Knob
08	KBE-298-9308S	Spring
09	KBE-298-5206G	O-Ring (3.8x1.9)
10	KBE-298-9336S	O-Ring (3of) (10.5x1.0)
11	KBE-298-9307S	O-Ring (7.5x1.5)
12	KBE-298-9312S	Rotor Spacer
13	KBE-298-5510L	Ball Bearing (2of) (696ZZ)
14	KBE-298-9314S	Rear End Plate
15	KBE-298-9315S	Rotor
16	KBE-298-9316S	Vane (4of)
17	KBE-298-5616S	Spring Pin (2of) (1.5x6)
18	KBE-298-9318S	Cylinder
19	KBE-298-9319S	Front End Plate
20	KBE-298-9320S	Ball Bearing (2of) (608ZZ)
21	KBE-298-5735M	O-Ring (6x1.5)

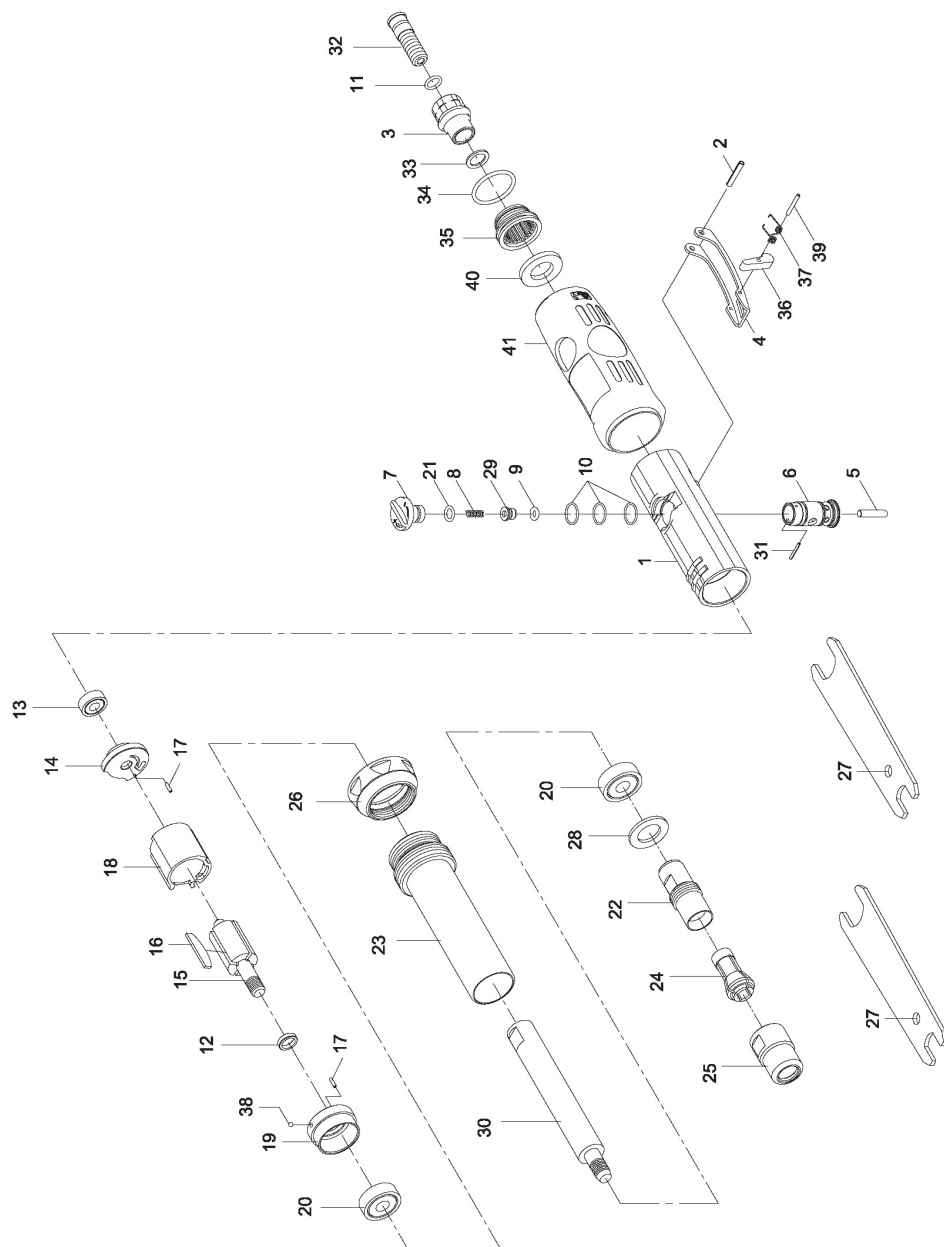


MODEL NUMBER	B3555
COLLET SIZE	1/4" (6mm), 1/8" (3mm)
FREE SPEED	25,000 rpm
RECOMMENDED AIR PRESSURE	6.2bar (90psi)
AIR CONSUMPTION	4cfm (113L/min)
AIR INLET THREAD	1/4" NPT
MINIMUM AIR HOSE SIZE (ID)	10mm (3/8")
NOISE LEVEL†	91dBA
SOUND POWER LEVEL†	98dBA
VIBRATION LEVEL#	4.53m/s²
OVERALL LENGTH	260mm
NET WEIGHT	0.68kg


† Per Pneurop Standard PrEN 12366.

Per EN 28927-1.

SUGGESTED AIR SUPPLY

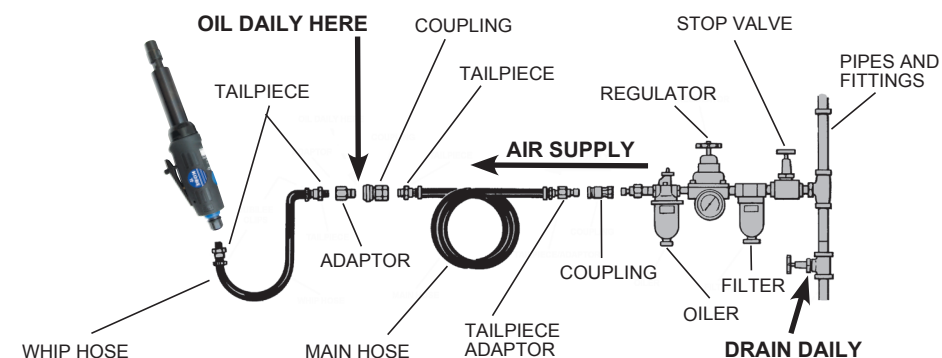

- 1) Before connecting, ensure the dust cap is removed (**Fig A**).
- 2) Connect tools to the air line using pipe, hose and fitting sizes listed in the specifications.
- 3) Supply tools with 6.2bar (90psi) of clean, dry air. A higher pressure and unclean air will shorten the tool life because of faster wear and may create a hazardous condition.

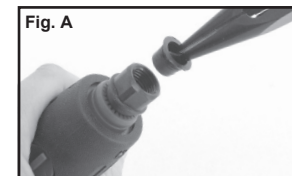


REQUIREMENTS FOR QUICK ACTING COUPLINGS CONNECTED TO AIR TOOLS:

A whip hose of minimum length 500mm between the tool and the coupling is required in order to comply with Health and Safety

Executive Guide **HS(G) 39, BS4575:2, ISO 4414 and ISO 6150.**

This will also reduce the strain applied by the weight of the air hose on the end of the air tool.

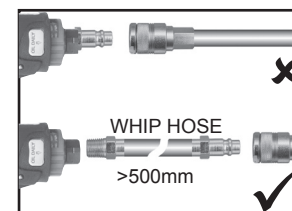



WARNING! BEFORE ATTEMPTING TO USE THIS PRODUCT, MAKE SURE YOU ARE FAMILIAR WITH ALL OPERATING AND SAFETY INSTRUCTIONS.

ATTACHING OR REMOVING CONSUMABLE ACCESSORIES

1. Disconnect air tool from air supply before changing attachment.
2. Unscrew the collet using a 17mm spanner (**Fig B**).
3. Place the attachment in to the loosened collet.
4. Tighten the collet with the spanner to secure the attachment.
5. Allow the air tool to run up to its maximum speed before applying to the workplace.



USING THE AIR TOOL

1. Carry out daily inspection and lubrication of the tool.
2. Remove the plastic dust cap using a pair of pliers (**Fig. C**).
3. Connect the air tool to the air supply using a whip hose.
NOTE: Due to the rotating air inlet feature, a 17mm spanner will be required to hold the inlet while securing the whip hose.
4. Place the tool over the area you intend to work on and squeeze the trigger to start the air tool (**Fig. D**). Release the throttle to stop the air tool.
5. The amount the throttle is squeezed, will determine the speed of the tool.
Do not allow the air tool to free run for an extended period
6. Turn the speed regulator to select the working pressure (**Fig. E**).



WARNING!

- **ALWAYS** use the right tool for the job - DO NOT improvise by using accessories not designed for the tool or job.
- **ALWAYS** inspect the air tool for cracks or excessive wear before connecting and during use.
- Be careful not to over tighten fasteners.

A competent person must disassemble and inspect higher wear parts periodically if the tool is used every day or if there is a noticeable drop in the tool performance. Any damaged or worn parts must be replaced. Your 12 month warranty could become void if the tool is unnecessarily dismantled and damage is caused. If you are unsure about dismantling the tool, please return it to your local Kobe agent.

The use of other than genuine Kobe replacement parts may result in safety hazards, decreased tool performance, increased maintenance and voiding of warranty.

Mineral spirits are recommended when cleaning the tool and its parts. DO NOT clean with any solvents or oils containing acids, esters, ketones, chlorinated hydrocarbons or nitro carbons. DO NOT use chemicals that have a low flash point. For spare parts or servicing please contact your local Kobe agent.

LUBRICATION

Air tools require lubrication throughout the life of the tool as moisture in the compressed air will rust the air motor and the correct lubrication is vital for the maximum performance of the air tool. Failure to lubricate the tool at the air inlet will void your warranty.

Either use an air line lubricator with air tool oil adjusted to two drops per minute, or if an air line lubricator cannot be used, add one teaspoon of air motor oil to the inlet (**Fig. F**) or into the hose at the nearest connection to the air supply once a day and then run the tool. ISO Grade VG22 oil is recommended. A rust inhibitive oil is acceptable for air tools.

Any excess oil in the motor is expelled immediately from the exhaust port. Always direct the exhaust port away from people or objects (**Fig. G**).

Lubricate the tool holder regularly with a light machine oil. (**Fig. H**). Do not lubricate the tool with flammable or volatile liquids such as paraffin (kerosene), diesel or jet fuel.

