

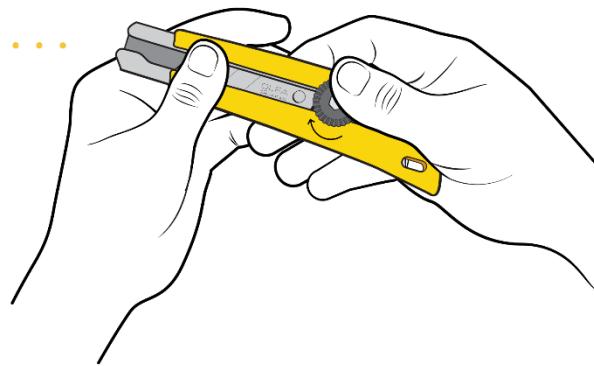
BLADE CHANGE INSTRUCTIONS

For all ratchet-wheel style knives including

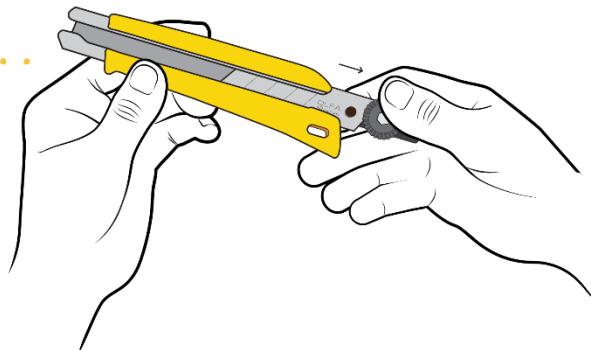
Models: CL-1, H-1, L-1, L-2, L-5, MXP-L, NH-1, NOL-1, OL, XH-1, XL-2, 300

1

TURN RATCHET-WHEEL
DIAL COUNTER-
CLOCKWISE TO LOOSEN
LOCKING MECHANISM.

**2**

SLIDE RATCHET-WHEEL
ASSEMBLY PAST BASE OF
HANDLE TO REMOVE.



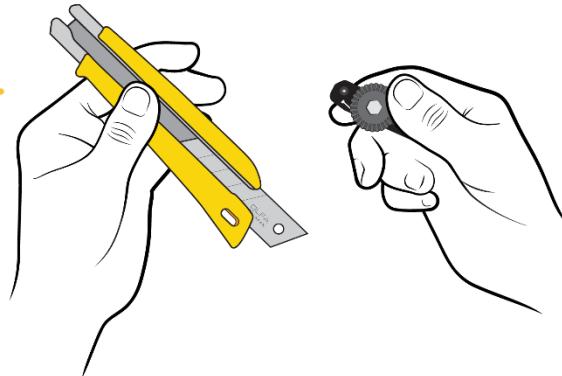
BLADE CHANGE INSTRUCTIONS

For all ratchet-wheel style knives including

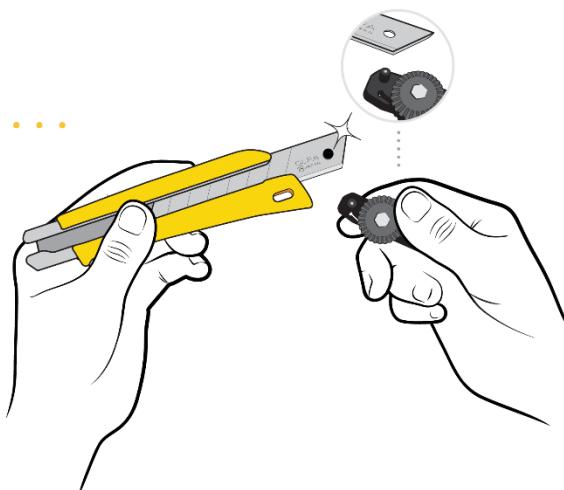
Models: CL-1, H-1, L-1, L-2, L-5, MXP-L, NH-1, NOL-1, OL, XH-1, XL-2, 300

3

REMOVE RATCHET-WHEEL DIAL FROM BLADE. CAREFULLY SLIDE USED BLADE SECTION OUT OF HANDLE AND DISPOSE OF PROPERLY IN SHARPS CONTAINER.

**4**

INSERT NEW BLADE INTO CHANNEL. ALIGN WITH ASSEMBLY BY PLACING THE HOLE IN THE BLADE OVER THE RAISED MOUNTING POINT.



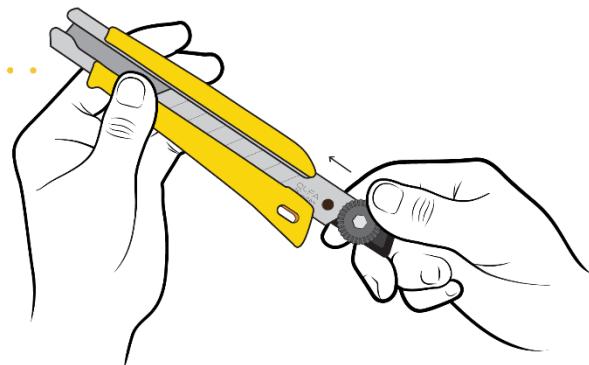
BLADE CHANGE INSTRUCTIONS

For all ratchet-wheel style knives including

Models: CL-1, H-1, L-1, L-2, L-5, MXP-L, NH-1, NOL-1, OL, XH-1, XL-2, 300

5

SLIDE RATCHET-WHEEL
ASSEMBLY AND BLADE
FORWARD.

**6**

TURN RATCHET-WHEEL DIAL
CLOCKWISE TO TIGHTEN THE
LOCKING MECHANISM AND
RETURN TO WORK.

