



Always dispose of unwanted tools, accessories and packaging materials in an environmentally friendly manner.



In observance of European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE) and its implementation in accordance with national law, electrical goods that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.
Do not dispose of electrical goods with domestic waste materials as inappropriate disposal may cause potential hazards to the environment and human health.
For further information, please contact your local authority or the retailer from whom you purchased the product.



This product does not contain any restricted substances in concentrations and applications which are banned by the European RoHS2 Directive.

DECLARATION OF CONFORMITY

We hereby certify that 1/2" HEAVY DUTY AIR DRILL

(ORDER CODE: KBE-270-1500E)

complies with all the relevant provisions of the

EMC Electromagnetic Compatibility Directive 2006/42/EC

Standards Applied:

EN ISO 12100:2010, EN ISO 11148-3:2012, EN ISO 28927-5:2009, EN ISO 15744:2008

Signed:



Date: 6th February 2022

Name: Toni Johanson

Position: Compliance Director

KOBE TOOLS

Cromwell Group (Holdings) Limited.
65 Chartwell Drive, Wigston, Leicestershire,
England, LE18 2FS

Contact Us: contactus@cromwell.co.uk

Country of Origin :Taiwan



QUALITY GUARANTEE & WARRANTY

KOBE INDUSTRIAL AIR TOOLS carry a one year manufacturer's warranty.

KOBE INDUSTRIAL AIR TOOLS are designed & manufactured to the highest standards & specifications

Assuring the quality and performance required by all sectors of industry.

KOBE INDUSTRIAL AIR TOOLS are fully guaranteed against faulty materials & workmanship.

Should they be found to be defective, they will either be repaired or replaced free of charge (fair wear and tear and/or misuse excepted).

Please retain supplier invoice as proof of purchase.

KOBE™

PROFESSIONAL AIR TOOLS

1/2" HEAVY DUTY AIR DRILL

**MODEL
DP513**

**ORDER CODE
KBE-270-1500E**



- Jacobs Chuck
- High Reduction Gearbox
- High Torque
- With Side Handle
- 1/2HP Motor



WARNING: THE SAFETY INFORMATION GIVEN INSIDE MUST BE READ AND UNDERSTOOD BY ANY PERSON USING, INSTALLING, REPAIRING OR MAINTAINING THESE PRODUCTS.

OPERATOR'S MANUAL

Please retain this information for future reference.

You have purchased a quality industrial product that is designed for high performance and long service life. If correct use, safety and maintenance procedures are observed this machine will last for many years.

KOBE INDUSTRIAL AIR TOOLS have been specifically designed to help you work **SAFELY** and **EFFICIENTLY**. Your care and good judgement are the best protection against injury, but always ensure that the appropriate safety equipment is worn. All possible hazards cannot be covered here, but the most important ones have been highlighted.

GENERAL OPERATING HAZARDS

- Keep clear from all rotating spindles and moving parts
- Ensure that all long hair and loose clothing, ties, scarves, jewelry, etc., are secured or removed
- Always wear approved eye protection during operation, repair or maintenance of the tool, or whilst changing accessories. The operator of the tool is responsible for following accepted eye, face, respiratory, hearing and body protection.
- Ensure that all others in the area are wearing approved eye, face, respiratory, hearing and body protection. Even small projectiles can injure eyes and cause blindness.
- Wear gloves to protect hands from cuts and burns.
- Do not touch accessories during or after use.
- Never disable the safety lever throttle.
- Do not modify tools or accessories and only use for the task for which they have been designed.
- Ensure that all accessories are rated to the "Free" speed of the tool and intact before fitting or using.
- All users must be physically able and competent to handle the size, weight and power of the tools and have received appropriate training to perform the task.
- Note the tool rundown time. Control the tool as if it were under power.

SPECIFIC OPERATING HAZARDS

- Only use abrasives that are designed for the tool.
- Do not use cut off wheels or router bits in this tool.
- An abrasive fitted to a tool that is not designed for its use may cause serious injury or death.
- Make sure that insert tools have the correct shaft size for the collet.
- Protect abrasive accessories from exposure to water, solvents, high humidity, freezing temperature and extreme temperature changes.
- Store accessories in protective racks or compartments to prevent damage.

- The user is responsible for making sure that the specification label on the air tool is kept legible, indicating the model number, serial number and rpm. If not, reorder and replace.

WORKPLACE HAZARDS

- Slip/Trip/Fall is a major cause of serious injury or death. Be aware of excess hose around the work place.
- Maintain a balanced body position and secure footing.
- High sound levels can cause permanent hearing loss. Use approved hearing protection.
- Repetitive work motions, awkward positions and exposure to vibration can cause "Repetitive Strain Injuries". If numbness, tingling, pain or whitening of the skin occurs consult a doctor.
- Avoid inhaling dust or handling debris from work process which can be harmful to your health.
- This tool is not intended for use in a flammable or combustible atmosphere and is not insulated for contact with electric power sources.
- Use a vice or clamping device to hold the work piece firmly in place.

AIR SUPPLY AND CONNECTION HAZARDS

- Air under pressure can cause severe injury.
- Always shut off air supply, drain hose of air pressure and disconnect tools from air supply when not in use, before changing accessories or when making repairs.
- Never direct air at yourself or anyone else.
- Whipping hoses can cause serious injury. Always check for damaged or loose hoses and fittings.
- Do not use quick disconnect couplings at tool. See instructions for suggested air supply.
- Whenever universal twist couplings are used, lock pins must be installed.
- Do not exceed maximum air pressure of 90psi/6.2bar.
- Do not carry the tool by the air hose.

SPECIFICATIONS

MODEL NUMBER DP513
FREE SPEED 500rpm
CHUCK SIZE 13mm
SPINDLE 3/8 x 24M
AIR INLET THREAD 1/4 NPT



AIR HOSE SIZE (ID) 10mm
AIR PRESSURE 90PSI
AIR CONSUMPTION 4CFM*
OVERALL LENGTH 225mm
WEIGHT 1.5 kg

*Based on 15 second cycle per minute average use.

SPARE PARTS BREAKDOWN

No.	Order Code	Description	Qty
21	CES-298-6001B	Ball Bearing	1
22	KBE-298-1964S	Set Screw	1
23	KBE-298-1967S	O-Ring	1
24	KBE-298-1970S	Screw	2
25	KBE-298-2003S	Planet Pin	2
26	KBE-298-2006S	Planet Cage	1
27	KBE-298-2009S	Planet Gear	5
28	KBE-298-2012S	Bushing	5
29	CES-298-6005F	Ball Bearing	1
30	KBE-298-2015S	Planet Pin	3
31	KBE-298-2018S	Internal Gear	1
32	KBE-298-2021S	Front Housing	1
33	KBE-298-2024S	Seal	1
34	CES-298-9051B	Ball Bearing	1
37	KBE-298-2027S	Washer	1
38	KBE-298-2030S	Planet Cage	1
39	KBE-298-2033S	Retainer	1
40	KBE-298-2036S	Handle	1
	KBE-280-0125A	13mm Chuck (Not Shown)	
	KBE-280-0128A	Chuck Key (Not Shown)	

No.	Order Code	Description	Qty
1	KBE-298-1916S	Motor Housing	1
2	KBE-298-1919S	Pin	1
3	KBE-298-1922S	Air Intake Bushing	1
4	KBE-298-1925S	Trigger	1
5	KBE-298-1928S	Valve Stem	1
6	KBE-298-1931S	Valve Bushing	1
7	KBE-298-1934S	O-Ring	1
8	KBE-298-1937S	Spring	1
9	KBE-298-1940S	O-Ring	2
10	KBE-298-1943S	Muffler Diffuser	1
11	KBE-298-1946S	Bearing Cap	1
13	CES-298-0627B	Ball Bearing	1
14	KBE-298-1949S	Rear End Plate	1
15	KBE-298-2000S	Rotor	1
16	KBE-298-0040S	Rotor Blades	4
17	KBE-298-1955S	Pin	2
18	KBE-298-1958S	Cylinder	1
19	KBE-298-1961S	Front End Plate	1
20	CES-298-0609B	Ball Bearing	1

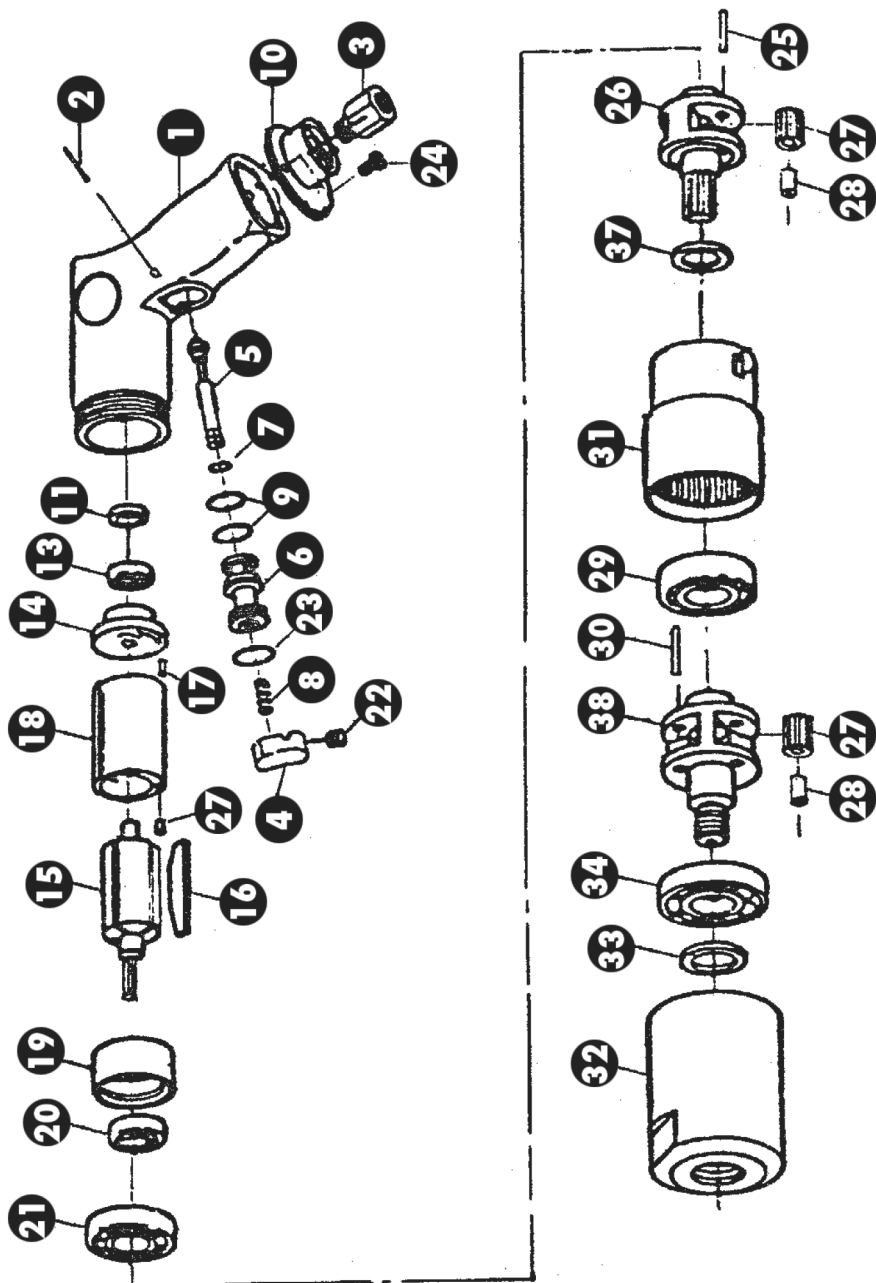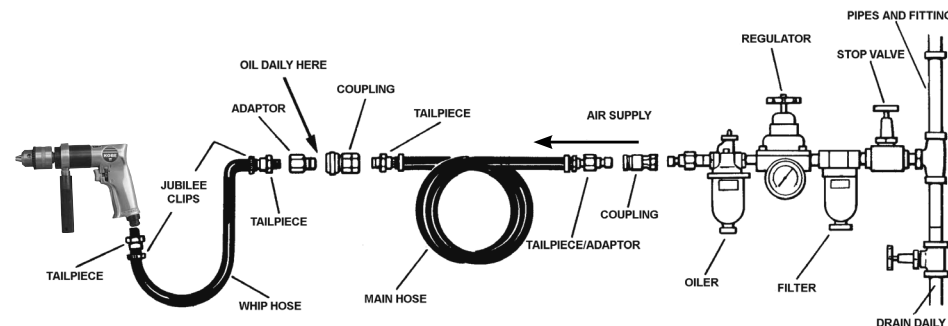

Connect tools to the air line using pipe, hose and fitting sizes listed in the specifications. Supply tools with 90psi/6.2bar of clean, dry air. A higher pressure will reduce the tool life.

Requirements for Quick Acting Couplings connected to Air Tools:

A leader hose of minimum length 500mm between the tool and the coupling is required in order to comply with Health and Safety Executive Guide **HS(G) 39, BS4575:2, ISO 15744:2002 and ISO 28927-10:2011.**

LUBRICATION

Air tools require lubrication throughout the life of the tool otherwise moisture in the compressed air will rust the air motor. Correct lubrication is vital for the maximum performance of the die grinder and an airline lubricator should be fitted into the system down stream of the filter. Failure to lubricate the tool at the air inlet will void your warranty.

Either use an air line lubricator with air tool oil adjusted to two drops per minute, or if an air line lubricator cannot be used, add air motor oil to the inlet once a day (See fig 1). ISO Grade VG22 oil is recommended.

Any excess oil in the motor is expelled immediately from the exhaust port. Always direct the exhaust port away from people or objects.

Do not lubricate the die grinder with flammable or volatile liquids such as kerosene, diesel or jet fuel.

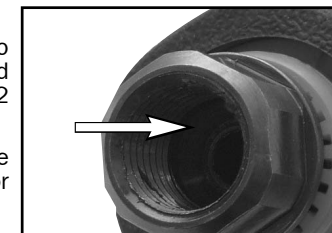


Fig. 1



DO NOT OPERATE TOOL WITHOUT CHISEL IN THE CYLINDER, OR WITH CHISEL NOT FULLY SEATED OR SECURED INTO THE CYLINDER. INTERNAL DAMAGE WILL RESULT IF PISTON IS ALLOWED TO STRIKE CYLINDER WALL.

Always shut off air supply, relieve hose of air pressure and disconnect tool from air supply when changing accessories. Hold the tool correctly: be ready to counteract sudden movements, particularly at drill bit breakthrough.

The drill bit can suddenly bind and cause the workpiece or tool to rotate, causing arm or shoulder injuries. Side handles are commended for straight drills with a chuck capacity larger than 6.5mm

(1/4 inch), or if the torque reaction may exceed 4Nm (3 lbf.ft).

Side handles are commended for pistol-grip drills with a chuck capacity larger than 10mm (3/8 inch),

or if the torque reaction may exceed 10Nm (7.5 lbf.ft).

Disassemble and inspect higher wear parts every three months if the tool is used every day and replace damaged or worn parts.

Replace as necessary all "O" rings, bearings and rotor blades, see parts break down. It is recommended that adequate stocks of standard service parts are held for servicing requirements.

The use of other than genuine Kobe replacement parts may result in safety hazards, decreased tool performance and increased maintenance.

Mineral spirits are recommended when cleaning the tool and its parts. Do not clean with any solvents or oils containing acids, esters, ketones, chlorinated hydrocarbons or nitro carbons. Do not use chemicals that have a low flash point.

For spare parts or servicing please contact your nearest agent. Remember to quote tool model number and spare part number when ordering spares.

When disposing of components, lubricants, etc. ensure that relevant environmental procedures are carried out.